

**2** OPTIONAL ACCESSORIES

**SHREDDER KIT**

P/N 890209. *Shreds leaves, dramatically reducing total volume.*

**HOSE KITS**

*For vacuuming in hard to reach areas.*

**Heavy Duty Vacuum**

**Hose Kit P/N 900943.**

4" (102mm) x 10' (3.05m)

**Homeowners Vacuum**

**Hose Kit P/N 900942.**

4" (102mm) x 10' (3.05m)

**NOZZLE WEAR PLATES**

P/N 900810. *Extends nozzle life when used along curbs and hard surfaces.*

**STANDARD TURF QUICK DEBRIS BAG**

P/N 890307. *Standard on TKD models. For use in leaves and grass in non-dusty conditions.*

**OPTIONAL DEBRIS BAGS**

**FELT DEBRIS BAG**

P/N 900803 *for use in dusty conditions.*

**HEAVY DUTY DEBRIS BAG**

P/N 900798 *Reinforced lower panel.*

**DEBRIS BAG COVER**

P/N 900801 *Directs dust downward away from operator.*


**REAR CASTER KIT**

P/N 900655 *Improves maneuverability on hard surfaces.*

**ZIPPERLESS QUICK BAG**

P/N 890309 *For non dusty conditions that are damaging to zippers.*

**1**

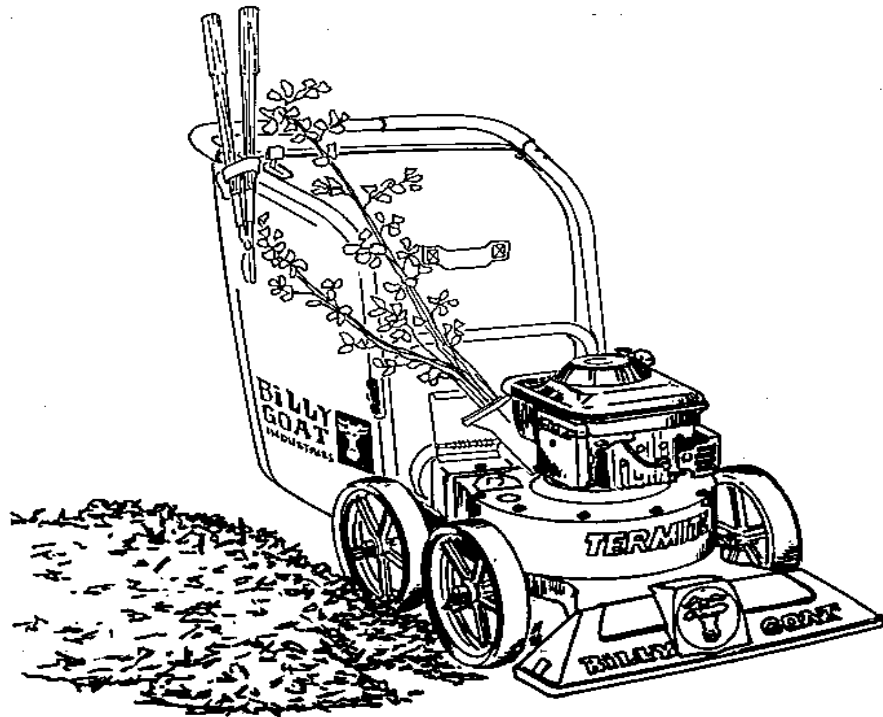

The **TERMITE**®

*Thank You for Selecting*  
**The Powerful TKD TERMITE® VACUUM CHIPPER**

**Operator Owner's Manual**  
**TKD502H, TKD502ICQ**

**3**

**Specifications**

	TKD502H	TKD502ICQ
ENGINE: H.P.	5.5 (4.1 kW)	5 (3.73 kW)
ENGINE: TYPE	HONDA OHV	B&S I/C
ENGINE: FUEL CAP.	2.01 qt. (1.9 L)	1.5 qt. (1.4 L)
ENGINE: OIL CAP.	0.69 qt. (0.65 L)	0.63 qt. (0.6 L)
WEIGHT: UNIT	133# (60.3 kg)	121# (54.9 kg)
WEIGHT: SHIPPING	156# (70.8 kg)	144# (65.3 kg)
ENGINE WEIGHT:	36# (16.3 kg)	24.38# (11.05 kg)

UNIT SIZE: OVERALL LENGTH: 62"(1.57m) OVERALL WIDTH 26.75" (0.68m) OVERALL HEIGHT 42" (1.07m)

**4**

2 SAFETY INSTRUCTIONS

3 GENERAL SAFETY & ASSEMBLY

4 PARTS BAG & CONTROLS & LABELS

5 - 7 OPERATION

8 - 9 MAINTENANCE

10 - 12 PARTS DRAWING & LIST

12 TROUBLE SHOOTING, & WARRANTY PROCEDURE

# 5 IN THE INTEREST OF SAFETY



**BEFORE STARTING ENGINE, READ AND UNDERSTAND THE "ENTIRE OPERATOR'S MANUAL & ENGINE MANUAL."**



**THIS SYMBOL MEANS WARNING OR CAUTION. DEATH, PERSONAL INJURY AND/OR PROPERTY DAMAGE MAY OCCUR UNLESS INSTRUCTIONS ARE FOLLOWED CAREFULLY.**



**WARNING:** The Engine Exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

## WARNING: DO NOT

1. **DO NOT** run engine in an enclosed area. Exhaust gases contain carbon monoxide, an odorless and deadly poison.

2. **DO NOT** place hands or feet near moving or rotating parts.

3. **DO NOT** store, spill or use gasoline near an open flame, or devices such as a stove, furnace, or water heater which use a pilot light or devices which can create a spark.

4. **DO NOT** refuel indoors where area is not well ventilated. Outdoor refueling is recommended.

5. **DO NOT** fill fuel tank while engine is running. Allow engine to cool for 2 minutes before refueling. Store fuel in approved safety containers.

6. **DO NOT** remove fuel tank cap while engine is running.

7. **DO NOT** operate engine when smell of gasoline is present or other explosive conditions exist.

8. **DO NOT** operate engine if gasoline is spilled. Move machine away from the spill and avoid creating any ignition until the gasoline has evaporated.

9. **DO NOT** transport unit with fuel in tank.

10. **DO NOT** smoke when filling fuel tank.

11. **DO NOT** choke carburetor to stop engine. Whenever possible, gradually reduce engine speed before stopping.

12. **DO NOT** run engine at excessive speeds. This may result in injury & /or damage to unit.

13. **DO NOT** tamper with governor springs, governor links or other parts which may change the governed engine speed.

14. **DO NOT** tamper with the engine speed selected by the engine manufacturer.

15. **DO NOT** check for spark with spark plug or spark plug wire removed. Use an approved tester.

16. **DO NOT** crank engine with spark plug removed. If engine is flooded, place throttle in "FAST" position and crank until engine starts.

17. **DO NOT** strike flywheel with a hard object or metal tool as this may cause flywheel to shatter in operation. Use proper tools to service engine.

18. **DO NOT** operate engine without a muffler. Inspect periodically and replace, if necessary. If engine is equipped with muffler deflector, inspect periodically and replace, if necessary, with correct deflector.

19. **DO NOT** operate engine with an accumulation of grass, leaves, dirt or other combustible material in the muffler area.

20. **DO NOT** use this engine on any forest covered, brush covered, or grass covered unimproved land unless a spark arrester is installed on the muffler. The arrester must be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands.

21. **DO NOT** touch hot muffler, cylinder, or fins because contact may cause burns.

22. **DO NOT** run engine without air cleaner or air cleaner cover.

23. **DO NOT** operate during excessive vibration!

24. **DO NOT** leave machine unattended while in operation.

25. **DO NOT** park machine on a steep grade or slope.

## WARNING: DO

1. **ALWAYS DO** remove the wire from the spark plug when servicing the engine or equipment TO PREVENT ACCIDENTAL STARTING.

2. **DO** keep cylinder fins and governor parts free of grass and other debris which can affect engine speed.

3. **DO** pull starter cord slowly until resistance is felt. Then pull cord rapidly to avoid kickback and prevent hand or arm injury.

4. **DO** examine muffler periodically to be sure it is functioning effectively. A worn or leaking muffler should be repaired or replaced as necessary.

5. **DO** use fresh gasoline. Stale fuel can gum carburetor and cause leakage.

6. **DO** check fuel lines and fittings frequently for cracks or leaks. Replace if necessary

7. **Follow** engine manufacturer operating and maintenance instructions.

8. **Inspect** machine and work area before starting unit.

### 6 TABLE OF CONTENTS

SAFETY INSTRUCTIONS	2
GENERAL SAFETY	3
ASSEMBLY	3
PARTS BAG & CONTROLS	4
LABELS	4
OPERATION	5-7
MAINTENANCE	8-9
PARTS DRAWING & LIST	10-12
TROUBLESHOOTING	12
WARRANTY PROCEDURE	12

### 7

### SOUND

**97** L<sub>WA</sub>

**SOUND TESTS**  
Sound tests conducted were in accordance with 79/113/EEC and were performed on 05/20/94 under the conditions listed:  
GENERAL CONDI- Sunny  
TION:

**109** L<sub>pA</sub>

TEMPERATURE: \_\_\_\_\_  
WIND SPEED: 3 MPH (4.8 kmh)  
WIND DIRECTION: N.W.  
HUMIDITY: 58%  
BAROMETRIC PRESSURE: 30.1" Hg (765mm Hg)

OPERATOR

### 8






### VIBRATION

**VIBRATION LEVELS 2.7g**  
Vibration levels at the operators handles were measured in the vertical, lateral, and longitudinal directions using calibrated vibration test equipment. Tests were performed on 05/20/94 under the conditions listed:  
GENERAL CONDI- Sunny  
TION:

TEMPERATURE: 70 °F (21.1 °C)  
WIND SPEED: 3 MPH (4.8 kmh)  
WIND DIRECTION: N.W.  
HUMIDITY: 58 %  
BAROMETRIC PRESSURE: 30.1" Hg (765mm Hg)

# 9 GENERAL SAFETY

For your safety and the safety of others, these directions should be followed:

-  Do not operate this machine without first reading owner's manual and engine manufacturer's manual.
-   Use of Ear Protection is recommended while operating this machine.
-   Use of Eye and Breathing protection is recommended when using this machine, especially in dry and dusty conditions. Optional bag cover directs dust toward ground, away from the operator.

- DO NOT place hands or feet inside nozzle intake opening, near debris outlet or near any moving parts.
- DO NOT start engine without debris bag and quick disconnect connected firmly in place to exhaust outlet.
- DO NOT start or operate machine with debris bag zipper open.

- DO NOT operate during excessive vibration.
- DO NOT remove bag until engine has been turned off and has come to a complete stop.
- DO NOT remove hose kit cap on nozzle until engine has been turned off and has come to a complete stop.
- DO NOT operate machine with hose cap, bag or hose removed.
- DO NOT use this machine for vacuuming **exclusively** sand, dust, fine dirt, rock, glass, string like material, grain, rags, cans, metal, bark or water.
- DO NOT operate this machine on slopes greater than 20%.
- DO NOT pick up any hot or burning debris, or any toxic or explosive material.
- DO NOT allow children to operate this equipment.

GENERAL SAFETY & ASSEMBLY 3

# 10 ASSEMBLY

 Read all safety and operating instructions before assembling or starting this unit.


 PUT OIL IN ENGINE BEFORE STARTING

1. **ASSEMBLE** Lift upper handle (item 6), remove items 8, 73, 74, & 30 from lower handle (item 27). Attach upper and lower handle as shown, and securely tighten folding handle knobs (item 73), while holding head of screw (item 8) firmly against upper handle.
2. **UNFOLD** the debris bag (item 1) and fasten bag neck to bag quick disconnect (item 83). Attach firmly to housing exhaust (item 52) see fig. 2.
3. **ATTACH** bag hanger strap to bag supports (item 11), preassembled to upper handle.
4. **INSTALL** tamper (item 85) in chipper hopper (see page 7).
5. **CONNECT** spark plug wire.


Your Billy Goat is shipped from the factory in one carton, completely assembled except for the upper handle, debris bag, and bag quick disconnect.

# 11 PACKING CHECKLIST

These items should be included in your carton. If any of these parts are missing, contact your dealer.

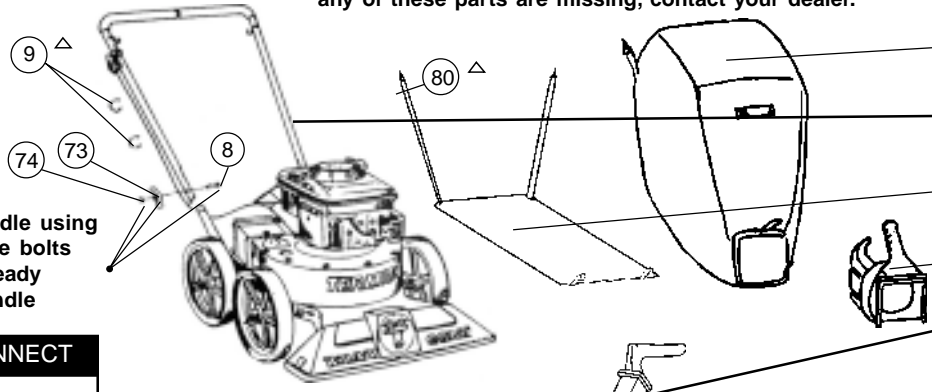

Attach upper handle using wingnuts, carriage bolts and lock nuts already assembled to handle stubs.

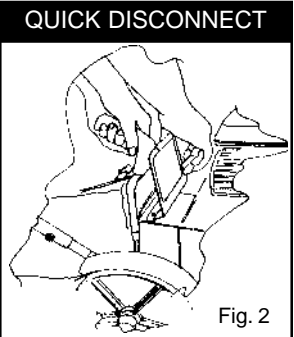

Check <input type="checkbox"/>	Debris Bag 900805
Check <input type="checkbox"/>	Handle Assy. 890204
Check <input type="checkbox"/>	Bag Support Assembly 900647
Check <input type="checkbox"/>	Connector Quick Disconnect 890176
Check <input type="checkbox"/>	Tamper 890229
Check <input type="checkbox"/>	Parts Bag & Literature Assy 890206
Check <input type="checkbox"/>	Briggs & Stratton English

△ Denotes parts found in Parts Bag Assembly (shown on page 4).


9 Clamp Cable 1" 900813 Qty. 2

80 Strap Bag Support 900642 Qty. 1

Literature Checklist	
Owner's Manual	<input type="checkbox"/> Check Owner's Manual 890252
Literature Parts Bag	<input type="checkbox"/> Check Literature Parts Bag 890253
Literature KD/TKD Accessories	<input type="checkbox"/> Check Literature KD/TKD Accessories 900713
Warranty Card	<input type="checkbox"/> Check Warranty Card 400972
EU Declaration of Conformity & EU Distributor List	<input type="checkbox"/> Check EU Declaration of Conformity & EU Distributor List 890262

**Throttle Control**

 Briggs engines have a primer button carburetor rather than choke type carburetor. Honda - Place in fast position to start.

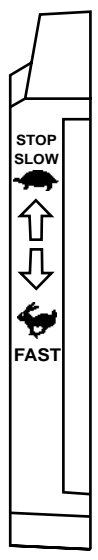

Start position

PARTS BAG & CONTROLS & LABELS 4

These labels should be included on your Vacuum. If any of these labels are damaged, replace them before putting this equipment into operation. Item and part numbers are given to help in ordering replacement labels..



Label Do Not Fill While Engine Is Hot  
Item 63 Part No. 400268

Label Danger Keep Hands and Feet Away  
Item 29 Part No. 400424



 
Label Danger Chipper For Wood Only  
Item 48 Part No. 890152




Label Read Owner's Manual  
Item 84 Part No. 890301



Label Danger Flying Material  
Item 62 Part No. 810736

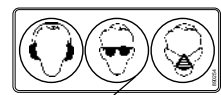

Label Ear Eye Breathing  
Item No. 86 Part No. 890254

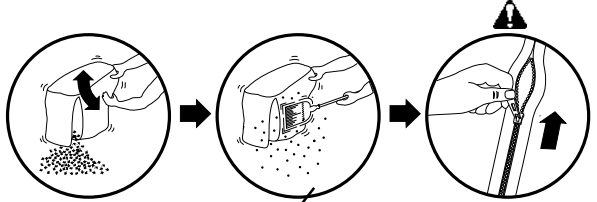

Debris Bag Label item 1

Honda



AIR CLEANER MAINTENANCE EVERY 50 HOURS (UNDER DUSTY CONDITION EVERY 10 HOURS)  
ENTRETIEN DU FILTRE A AIR TOUTES LES 50 HEURES (TOUTES LES 10 HEURES EN MILIEU POUSSIEREUX)  
LUFFILTER PFLEGE ALLE 50 STUNDEN (UNTER BESONNERS STAUBIGEN BEDINGUNGEN ALLE 10 STUNDEN)

**HONDA GXV 160**  
**MAX. 5.5HP 163cc**  
**4.0KW 163cm<sup>3</sup>**

- Be sure to fill crankcase with recommended oil before using. For detailed explanation, see the OWNER'S MANUAL.
- Remplir le carter avec de l'huile recommandée avant démarrage. Pour l'explication détaillée, voir le manuel d'utilisateur.
- Vor Anlassen des Motors Ölstand prüfen. Lesen Sie Bitte die Bedienungsanleitung sorgfältig durch.

**HONDA MOTOR CO., LTD. MADE IN JAPAN.**

Briggs & Stratton



# Operation

**INTENDED USE:** This machine is designed for vacuuming leaves, grass clippings and other types of organic litter and for chipping brush, limbs, corn and sunflower stalks and palm fronds.

Debris mixed with cans, bottles and small amounts of sand can be vacuumed; however, it is not this machine's primary purpose. Vacuuming cans, bottles and sand will affect the longevity of your machine.

Do not operate if excessive vibration occurs. If excessive vibration occurs, shut engine off immediately and check for damaged or worn impeller, loose impeller bolt, loose impeller key, loose engine or lodged foreign objects. Note: See parts list for proper impeller bolt torque specifications. (See trouble shooting section on page 12).



Like all mechanical tools, reasonable care must be used when operating machine.

**Inspect machine work area and machine before operating. Make sure that all operators of this equipment are trained in general machine use and safety.**



**PUT OIL IN ENGINE BEFORE STARTING.**

16.1

## STARTING



**ENGINE:** See engine manufacturer's instructions for type and amount of oil and gasoline used.

Engine must be level when checking and filling oil and gasoline.

**ENGINE SPEED:** Controlled by throttle lever on the handle. Under normal conditions, operate at minimum throttle to accomplish your current cleaning task.

**FUEL VALVE:** Move fuel valve to "ON" position (when provided on engine).

**CHOKE:** Operated with throttle control (Honda only).

**PRIMER:** Push primer per engine instructions (B&S only).

**THROTTLE:** Move remote throttle control to fast position. Pull starting rope to start engine.

### IF YOUR UNIT FAILS TO START:

See Troubleshooting on page 12.

16.2

## VACUUMING OPERATION

**VACUUM NOZZLE HEIGHT ADJUSTMENT:** is raised and lowered by pushing slightly downward on handle and pulling height adjust rod (item 23) up at left rear of machine.

**FOR MAXIMUM PICKUP:** Adjust nozzle close to debris, but without blocking airflow into the nozzle. *NOTE:* Never bury nozzle into debris.



### CLEARING A CLOGGED NOZZLE

**& EXHAUST:** Turn engine off and wait for impeller to stop completely and disconnect spark plug wire.

Wearing durable gloves, remove clog. **Danger,** the clog may contain sharp materials. Reconnect spark plug wire.




## Nozzle Height Fine Adjustment For Hard Surface

**Use:** Optimum nozzle height is 1/2" (12.7mm) above ground with engine not running. To adjust height, loosen screws (item 37), on quad plate. Prop front of nozzle up 1.0" (25.4mm) above ground. Keeping wheels on ground, re-tighten screws (item 37). Recheck and fine adjust to obtain 1/2" (12.7mm) at nozzle front (see fig 1).

### Adjustment

**Lowers Nozzle**  
Rod In First Hole

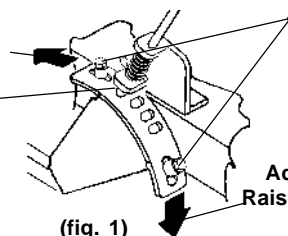

Item 37 Ref. Securely Tighten, position slots toward unit. Can be reversed to provide better hole alignment if required.

**Adjustment Raises Nozzle**

(fig. 1)

16.7

## CHIPPING OPERATION




**Wearing Eye Protection and Durable Gloves is recommended while operating chipper.**



**Use caution when using chipper**

Your **TERMITE**® chipper is designed to process tree branches and limbs up to 2" (50.8mm) diameter.

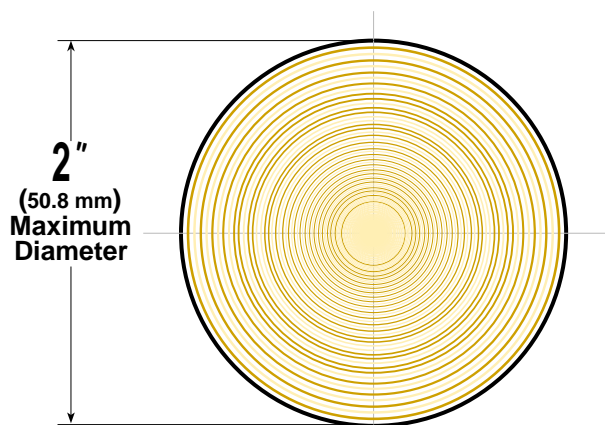

Several small branches can be grouped together and fed together into the chipper (see fig 2.).

When feeding forked branches, squeeze forks together and feed into chipper entrance (DO NOT overload). If forks are too large, use a pair of loppers to trim forks down to size. A lopper storage bracket is provided on every unit (loppers are not included)

16.8

## CLEARING A CLOGGED CHIPPER HOPPER



**Under normal circumstances, allow time for machine to clear all wood from chipper hopper before stopping engine. Otherwise, remaining pieces of wood will jam inside of chipper when engine stops. (See Tamper page 7).** Disconnect spark plug wire.

Remove debris bag quick disconnect from debris outlet on machine.



Wearing durable gloves, access impeller through debris outlet on fan housing and rotate impeller counter clock wise to dislodge and remove jam and remove debris from hopper with tongs or equivalent. Reconnect debris bag quick disconnect to machine. Reconnect spark plug wire.



(fig. 2) Note: Dry wood is harder to chip than green wood.

### 16.9 MULCH

Wood chips made from branches in your own yard make excellent mulch. A thick blanket of wood chips around plants and flowers keeps weeds out and moisture in (see fig. 3).

### 16.10 COMPOST

Vacuumed leaves, grass and other organic material from your own yard can be emptied into a pile or composter to provide enriched soil for later use as fertilizer in gardens and flower beds (see fig. 3).

Note: Allow green chips to dry before spreading around living plants.



(fig. 3)

### 16.11 FOLDING HANDLE

By removing the debris bag, quick disconnect and leaving the bag support tray in place, the operator's handle can be folded down to save space when transporting or storing unit (see fig 4).



(fig. 4) Push Model Shown

### 16.3 DEBRIS BAG

**Debris bags are normal replaceable wear items.**

**⚠ Note:** Frequently empty debris to prevent bag overloading with more weight than you can lift.

An optional bag and dust cover is available for use where debris will be vacuumed in dusty conditions (see **Optional Accessories shown on page 1.**)

**DO NOT place bag on or near hot surface**, such as engine. Run engine at 1/2 throttle for first 1/2 hour to condition new bag. Your new bag requires a break-in period to condition the pores of the material against premature blockage. The entire bag surface serves as a filter, and must be able to breathe to have good vacuum performance. Be sure engine has come to a complete stop before removing or emptying bag.

**This vacuum is designed for picking up trash, organic material and other similar debris** (see Safety Warnings page 2-3). However, many vacuums are used where dust is mixed with trash. Your unit can intermittently vacuum in dusty areas. Dust is the greatest cause of lost vacuum performance. However, following these rules will help maintain your machine's ability to vacuum in dusty conditions:

- Run machine at idle to quarter throttle.
- The debris bag must be cleaned more frequently. A vacuum with a clean, pillow soft bag will have good pickup performance. One with a dirty, tight bag will have poor pickup performance. If dirty, empty debris and vigorously shake bag free of dust.
- Machine or pressure-wash debris bag if normal cleaning does not fully clean bag. Bag should be thoroughly dry before use.

*Having one or more spare debris bags is a good way to reduce down time while dirty bags are being cleaned.*

- DO NOT** leave debris in bag while in storage.

16.12

**TAMPER**

Before turning machine off, use the Tamper to slowly push remaining pieces of wood through the chipper. This can prevent any remaining wood from jamming in the chipper when machine is turned off.



**Tamper Storage Position.**



**Do not leave tamper on the ground, store tamper in the chipper hopper.**

16.4

**HANDLING & TRANSPORTING:**

Using two people to lift machine is recommended. Lift holding the handle and front of nozzle. Secure in place during transport.

16.5

**STORAGE**

**⚠** Never store engine indoors or in enclosed poorly ventilated areas with fuel in tank, where fuel fumes may reach an open flame, spark or pilot light, as on a furnace, water heater, clothes dryer or other gas appliance.

**If engine is to be unused for 30 days or more, prepare as follows:**

**⚠** Be sure engine is cool. Do not smoke. Remove all gasoline from carburetor and fuel tank to prevent gum deposits from forming on these parts and causing possible malfunction of engine. Drain fuel outdoors, into an approved container, away from open flame. Run engine until fuel tank is empty and engine runs out of gasoline.

**NOTE:** Fuel stabilizer (such as Sta-Bil) is an acceptable alternative in minimizing the formation of fuel gum deposits during storage. Add stabilizer to gasoline in fuel tank or storage container. Always follow mix ratio found on stabilizer container. Run engine at least 10 min. after adding stabilizer to allow it to reach the carburetor.

**⚠** Do not store with debris in bag.



Use only a qualified mechanic for any adjustments, disassembly or any kind of repair .



**WARNING: TO AVOID PERSONAL INJURY, ALWAYS TURN MACHINE OFF, MAKE SURE ALL MOVING PARTS COME TO A COMPLETE STOP.**



**DISCONNECT SPARK PLUG WIRE BEFORE SERVICING UNIT.**



**ENGINE:** See engine manufacturer operator's instructions.

**DEBRIS BAG:** See page 6.



**RECONNECT SPARK PLUG WIRE, GUARDS, BAG, CAPS AND / OR HOSE BEFORE STARTING ENGINE.**

### 17.1 IMPELLER REMOVAL and CHIPPER ADJUSTMENT

#### IMPELLER REMOVAL

1. Wait for engine to cool and disconnect spark plug.
2. Drain fuel and oil from the engine.
3. Remove bag, quick release, and upper handle. Do not kink, stretch, or break control cables, control housings, or end fittings while removing handles.
4. Self propelled units only.
5. Remove housing top plate by removing bolts around outside of housing.
6. Leaving engine fastened to top plate, remove impeller bolt and lock washer and slide impeller off crankshaft ( A puller may be required).
7. Retain shim washers used at end of crankshaft for use at impeller reinstallation (see fig. 7). However, your unit may or may not have required the use of shim washers.
8. If impeller slides off freely, proceed to (step 11 or step 15). **(Do not drop impeller).**
9. If impeller does not slide off crankshaft, place two crowbars between impeller and housing on opposite sides. Pry impeller away from engine until it loosens. *Using a penetrating oil can help loosen a stuck impeller.*
10. If the impeller cannot be loosened, obtain a 1" (25.4mm) longer bolt of the same diameter and thread type as the impeller bolt. Invert engine and impeller and support engine above ground to prevent recoil damage. Thread longer bolt by hand into the crankshaft until bolt bottoms. Using a suitable gear or wheel puller against the bolt head and the impeller back-plate (near the blades), remove impeller from shaft.

#### CHIPPER BLADE REMOVAL AND SHARPENING

Chipper blades are normal replaceable wear items.



**DANGER** Chipper blade is sharp. Replace any damaged blade.

*Depending on the type and amount of wood being chipped, the chipper blade will eventually get dull, losing its cutting ability. Evidence of a dull blade is a noticeably reduced chipping ability or a rough cut on end of branch.*

**Note:** The chipper blade gap is factory set and should be checked each time impeller is removed from engine crankshaft and reset if required. If reassembly requires a different quantity of shim washers, Billy Goat® shim washer must be used.

11. Using a 3/16" Allen wrench and 1/2" open end wrench, remove chipper blade from impeller.
12. Sharpen blade by lightly grinding the cutting edge of the blade at **40 degrees** (see fig. 5). It is not necessary to remove all nicks from the cutting edge. **CAUTION:** Be careful to avoid heat buildup in the blade during sharpening. This will reduce its heat-treated hardness properties and will reduce blade life. Evidence of too much heat build-up is a change of color along sharpened edge.
13. The same chipper blade can be sharpened several times. However, blade replacement is required when blade no longer overhangs the chip relief hole in impeller back plate or if increased vibration occurs (see fig. 5).
14. Chipper blade installation is in reverse order of removal.


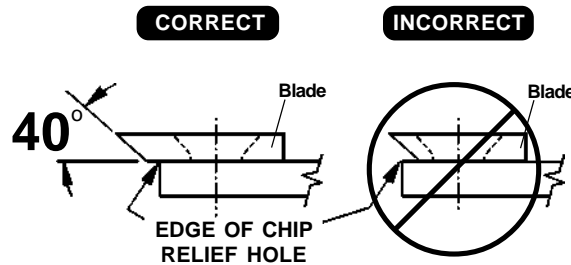


Fig. 5


15. To reinstall impeller, use a new impeller bolt and lockwasher and use exactly the same crankshaft impeller shim washers as were removed during disassembly (unless they were damaged). *However, your unit may or may not have required the use of shim washers.*
16. Tighten impeller bolt. Torque impeller bolt to 50 Ft. Lbs. (68 N·m) (see item 51 on page 11).
17. Slowly rotate impeller to insure proper chipper blade clearance. Check to see that gap between chipper blade and anvil surface (on lower side of housing top plate) measures between 0.040" (1.02mm) and 0.080" (2.03mm).
18. If gap is less than 0.040" (0.51mm), add shim washer 890130 (0.060" {1.52mm} thick) and/or 890131 (0.020" {1.02mm} thick), whichever is required. If gap is more than 0.080" (2.03mm), remove one or more shim washers as needed to obtain correct gap (see fig. 6 & fig. 7). The chipper will function at up to a maximum of 0.125" (3.18mm) gap.





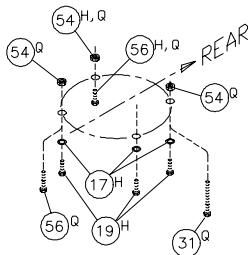

ENGINE MOUNTING

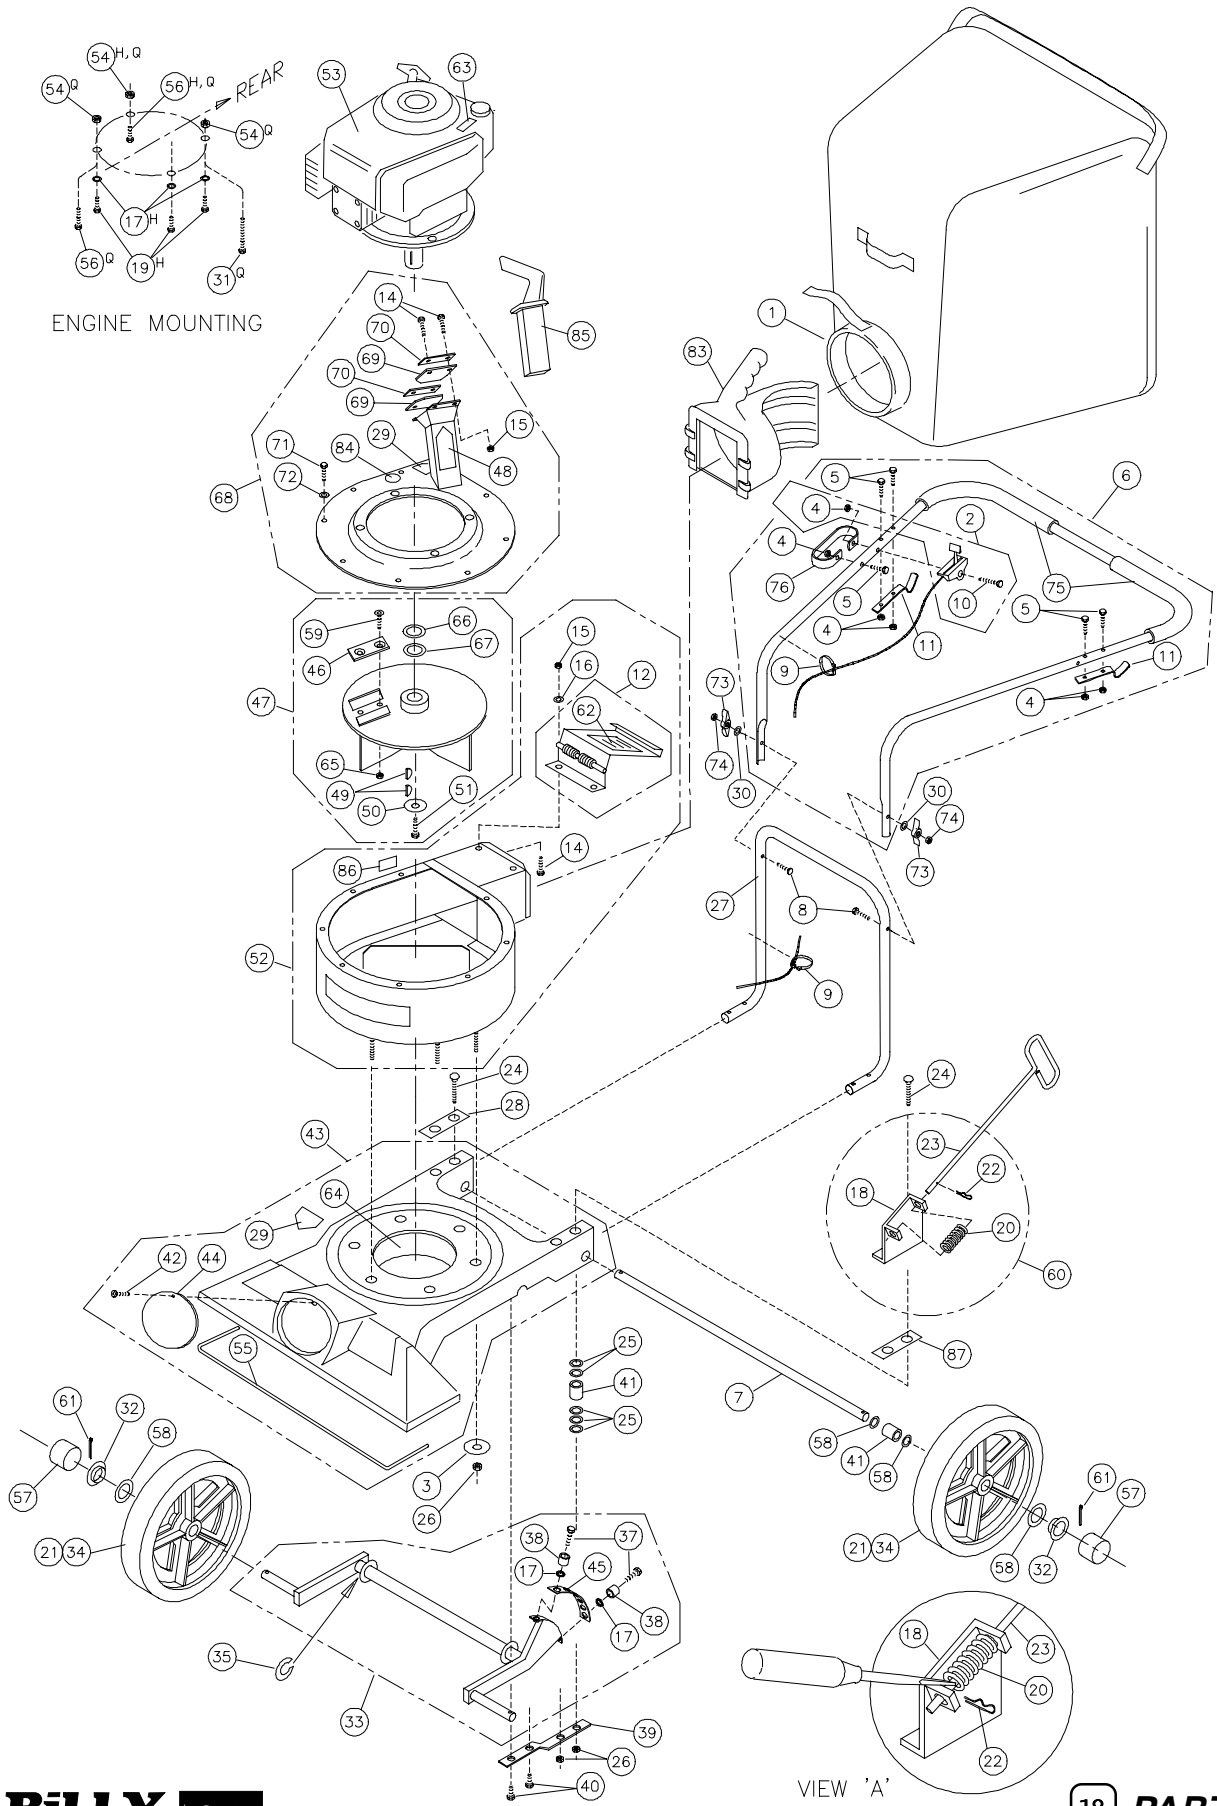

VIEW 'A'

PARTS DRAWING 10



18 PARTS DRAWING

TKD502H, TKD502ICQ

Item No.	19 PARTS LIST	Description	TKD502H Part No.	QTY	TKD502ICQ Part No.	QTY
1		DUST BAG TURF (Service) (Rental 900798) (incl. (2) of 4,5,&11)	890806	1	890806	1
2		THROTTLE ASSEMBLY (INCL. 1 ea items 4, 10)	810135	1	810135	1
3		WASHER - FLAT FENDER (11/32 x 1-1/4 x 0.05)	*8172020	6	*8172020	6
4		NUT LOCK (1/4 - 20)	*8160001	6	*8160001	6
5		SCREW CAP ( 1/4 - 20 x 1-1/2 HEX )	*8041008	6	*8041008	5
6		HANDLE ASS'Y (incl. items 4(3), 5(2), 11(2), 75(2), 76)	890162	1	890162	1
7		AXLE REAR - PUSH	900925	1	900925	1
8		SCREW HANDLE 5/16 - 18 x 2-1/4	900547	2	900547	2
9		CLAMP CABLE 1" I.D.	900813	2	900813	2
10		SCREW CAP 1/4 - 20 x 2 HEX	*8041010	1	*8041010	1
11		ROD BAG LOOP	900039	2	900039	2
12		DOOR EXHAUST ASS'Y (incl. item 62)	800178	2	800178	2
13						
14		SCREW CAP #10 - 24 x 5/8	*8059135	6	*8059135	6
15		NUT LOCK #10 NC	*8164005	6	*8164005	6
16		WASHER #10 FC	*8171001	2	*8171001	2
17		WASHER LOCK 5/16 EXT. TOOTH	*8181008	5	*8181008	2
18		BRACKET - HEIGHT ADJUSTMENT	900932	1	900932	1
19		SCREW CAP 5/16 - 24 x 1"	400164	3	-	-
20		SPRING	900136	1	900136	1
21		TIRE - ONLY (PER ASSY)	900507	1	900507	1
22		PIN - HAIR COTTER	900471	1	900471	1
23		ROD SHORT HEIGHT ADJUSTMENT	890110	1	890110	1
24		BOLT - CARRIAGE 5/16 - 18 x 3-1/2	*8024050	4	*8024050	4
25		WASHER - FLAT 5/16 SAE	*8172008	20	*8172008	20
26		NUT LOCK 5/16 - 18 HEX	*8160002	10	*8160002	10
27		HANDLE STUB (R.H.)	900911	1	900911	1
28		PLATE HANDLE SUPPORT	900933	1	900933	1
29		LABEL DANGER CUT FINGER	400424	2	400424	2
30		HANDLE STUB (L.H.)	900912	1	900912	1
31		SCREW CAP 5/16 - 18 x 2-1/2	-	-	*8041034	1
32		WASHER HUB CAP 1/2 I.D.	900927	4	900927	4
33		AXLE FRONT MECH. ASS'Y (INCL 17, 37, 38, 45)	900749	1	900749	1
34		WHEEL ASS'Y CAST (incl. items 21)	900509	4	900509	4
35		WASHER 0.75"C"	900997	1-0	900997	1-0
36		BEARING ONLY (QTY PER WHEEL ASSY)	900498	2	900498	2
37		SCREW CAP 5/16 - 18 x 1"	*8041028	2	*8041028	2
38		SPACER 0.340" I.D. x 0.330" LG.	900745	2	900745	2
39		PLATE BRACE REAR	900905	2	900905	2
40		SCREW CAP 1/4 - 20 x 1/2	*8041002	4	*8041002	4
41		SPACER	900926	6	900926	6
42		SCREW SELF TAPPING 10 - 24 x 1/2	*8123086	1	*8123086	1
43		NOZZLE MAINFRAME ASS'Y (incl. one of items 29, 44, 42, 55, 64)	900931	1	900931	1
44		PLUG	900146	1	900146	1
45		PLATE QUAD. ADJUSTABLE	900746	1	900746	1
46		BLADE CHIPPER	890101	1	890101	1
47		IMPELLER ASS'Y (incl. items 46, 49, 50, 51, 59, 65, 66, 67)	890146-S	1	890144-S	1
48		LABEL CHIPPER	890152	1	890152	1
49		KEY 3/16 SQ. x 1.25	-	-	9201080	1
		KEY HI PRO 5/32 x 5/8	900162	2	-	-
50		WASHER LOCK 3/8 TWISTED TOOTH	400502	1	400502	1
51		SCREW CAP 3/8 - 24 x 1 (HARDENED) (TORQUE 50 FT-LBS)(68N-m)	900154	1	900154	1
52		HOUSING ASS'Y (incl. items 12, 14, 15, 16, 86)	890155	1	890155	1
53		ENGINE HONDA 5.5 H.P.	900615	1	-	-
		ENGINE BRIGGS & STRATTON 5 H.P. QUANTUM IC	-	-	900273	1
54		NUT LOCK 5/16 - 18 HEX	*8160002	1	*8160002	3
55		ROD BUMPER	900939	1	900939	1
56		SCREW CAP 5/16 - 18 x 1-1/4	-	-	*8041029	2
		SCREW CAP 5/16 - 18 x 1-1/2	*8041030	1	-	-
57		CAP HUB	900486	4	900486	4
58		WASHER FLAT 1/2 SAE	*8172011	8	*8172011	8
59		SCREW SOCKET HD. 5/16 - 18 x 3/4 GR. 8	890103	2	890103	2
60		CAP END	890132	2	890132	2
61		PIN COTTER 3/32 x 3/4	*8197016	4	*8197016	4
62		LABEL DANGER FLYING MATERIAL	810736	1	810736	1
63		LABEL DO NOT FILL WHEN ENGINE IS HOT	400268	1	400268	1
64		GUARD FOAM INSERT	900977	1	900977	1
65		NUT KEPS 5/16 -18	890104	2	890104	2
66		WASHER SHIM 0.060" (1.52mm)	890130	0-1	890130	0-1
67		WASHER SHIM 0.020" (0.51mm)	890131	0-2	890131	0-2
68		PLATE TOP ASS'Y (incl. items 14, 15, 29, 48, 69, 70, 71, 72)	890159	1	890159	1
69		GUARD FLAPPER	890119	2	890119	2
70		PLATE FLAPPER ENTRANCE	890127	2	890127	2
71		SCREW CAP 5/16 - 18 x 1/2 HEX HD. GR. 5	890149	9	890149	9
72		WASHER LOCK CONICAL 5/16	890150	9	890150	9
73		KNOB WING 5/16 - 18	890108	2	890108	2
74		NUT LOCK 5/16 - 18 THIN HT.	*8161041	2	*8161041	2
75		GRIP HANDLE	830166	2	830166	2
76		BRACKET LOPPER LOOP W.A.	890161	1	890161	1
77		PLATE BAG SUPPORT PLASTIC	900640	1	900640	1

\* Denotes standard hardware item that may be purchased locally.

PARTS LIST 11

Item No.	Description	TKD505H Part No.	QTY	TKD505ICQ Part No.	QTY
78	BAG SUPPORT ASS'Y (incl. 4 (4), 77, 79(2), 80, 81(4), 82(4))	900647	1	900647	1
79	BAR SUPPORT HOOK	900641	2	900641	2
80	STRAP BAG SUPPORT	900642	1	900642	1
81	SCREW CAP 1/4 - 20 X 3/4	*8041004	4	*8041004	4
82	WASHER 1/4 SAE	*8172007	4	*8172007	4
83	CONNECTOR BAG QUICK	890176	1	890176	1
84	LABEL READ OWNER'S MANUAL	890301	1	890301	1
85	TAMPER	890229	1	890229	1
86	LABEL EAR EYE BREATHING	890254	1	890254	1
87	PLATE BRACE ADJ. KD / TKD	900756	1	900756	1


\* Denotes standard hardware item that may be purchased locally.

Problem	Possible Cause	Solution
Will not vacuum or has poor vacuum performance.	Dirty debris bag. Nozzle height set too high or too low. Hose kit cap missing. Clogged nozzle or exhaust. Excessive quantity of debris.	Clean debris bag. Shake bag clean or wash. Adjust nozzle height. Check for hose kit cap. Unclog nozzle or exhaust (see page 5). Allow air to feed with debris.
Poor chipping performance.	Extremely hard wood. Dull or damaged chipper blade.	Avoid extremely hard wood. Sharpen or replace chipper blade (see page 8).
Engine stalls or labors when chipping.	Feeding branches into chipper too rapidly. Engine service may be required.	Feed branches at a slower rate. Service engine.
Nozzle scrapes ground in lowest height setting.	Nozzle height out of adjustment.	Adjust nozzle height. (See Nozzle height fine adjustment for hard surface use on page 5).
Abnormal vibration.	Loose or out of balance impeller or loose engine.	Check impeller and replace if required. Check Engine.
Engine will not start.	Stop switch off (Honda only). Throttle in off position. Engine not in full choke position (Honda only). Out of gasoline. Bad or old gasoline. Spark Plug wire disconnected. Dirty air cleaner.	Check stop switches, throttle, choke position and gasoline. Connect spark plug wire. Clean or replace air cleaner. Or contact a qualified service person.
Engine is locked, will not pull over.	Debris locked in chipper blade, hopper or inside impeller. Engine problem.	See page 5, Clearing a clogged chipper hopper. Contact an engine servicing dealer for engine problems.


TROUBLE SHOOTING, & WARRANTY PROCEDURE 10 PARTS LIST 12

**22.1 Engine Service and Warranty**  
Contact your nearest engine manufacturer's authorized servicing dealer.

**21 Serial Plate** Record your machine model, serial number and date-of-purchase and where purchased



**96**



**CE95**

1803 S. Jefferson P.O. Box 308  
Lee's Summit, Mo. 64063 / USA  
(816) 524-9666 FAX (816) 524-6983

Model \_\_\_\_\_ Serial No. \_\_\_\_\_

Unit (weight) \_\_\_\_\_ Engine Power \_\_\_\_\_

\_\_\_\_\_ lbs \_\_\_\_\_ kg \_\_\_\_\_ kW @ \_\_\_\_\_ min<sup>-1</sup>

Operator \_\_\_\_\_


Purchase Date \_\_\_\_\_ Purchased from \_\_\_\_\_

**22 WARRANTY PROCEDURE**

Please fill in the WARRANTY CARD and send the upper part to Billy Goat. The WARRANTY terms are stated on the lower part which remains with the user. Whenever a Billy Goat Machine is faulty due to a defect in material and / or workmanship, the owner should make a warranty claim as follows:

- The Machine should be taken to the dealer from whom it was purchased or to an authorized Billy Goat dealer.
- The owner should present the remaining half of the Warranty Registration Card, or, if this is not available, the invoice or receipt.
- The Warranty Claim will be filled in by the authorized Billy Goat Dealer, who will send it with the faulty part to Billy Goat headquarters.
- The Quality / Service department at Billy Goat headquarters will study the claim and parts and will notify their conclusions.
- The decision by the Quality / Service department at Billy Goat headquarters to approve or reject a Warranty claim is final and binding.

*Note:* To process a Warranty Claim, it is necessary to quote the Model & Serial number who are printed on the Billy Goat Serial Plate.



**BILLY GOAT INDUSTRIES INC.**  
P.O. BOX 308 (1803 S JEFFERSON LEE'S SUMMIT, MO. 64063 / USA  
PHONE: 816-524-9666 FAX: 816-524-6983